

LC48 V

Spare parts

Ersatzteile


Pièces détachées

Reserve onderdelen

Repuestos


Reservdelar

A LC48V Deck

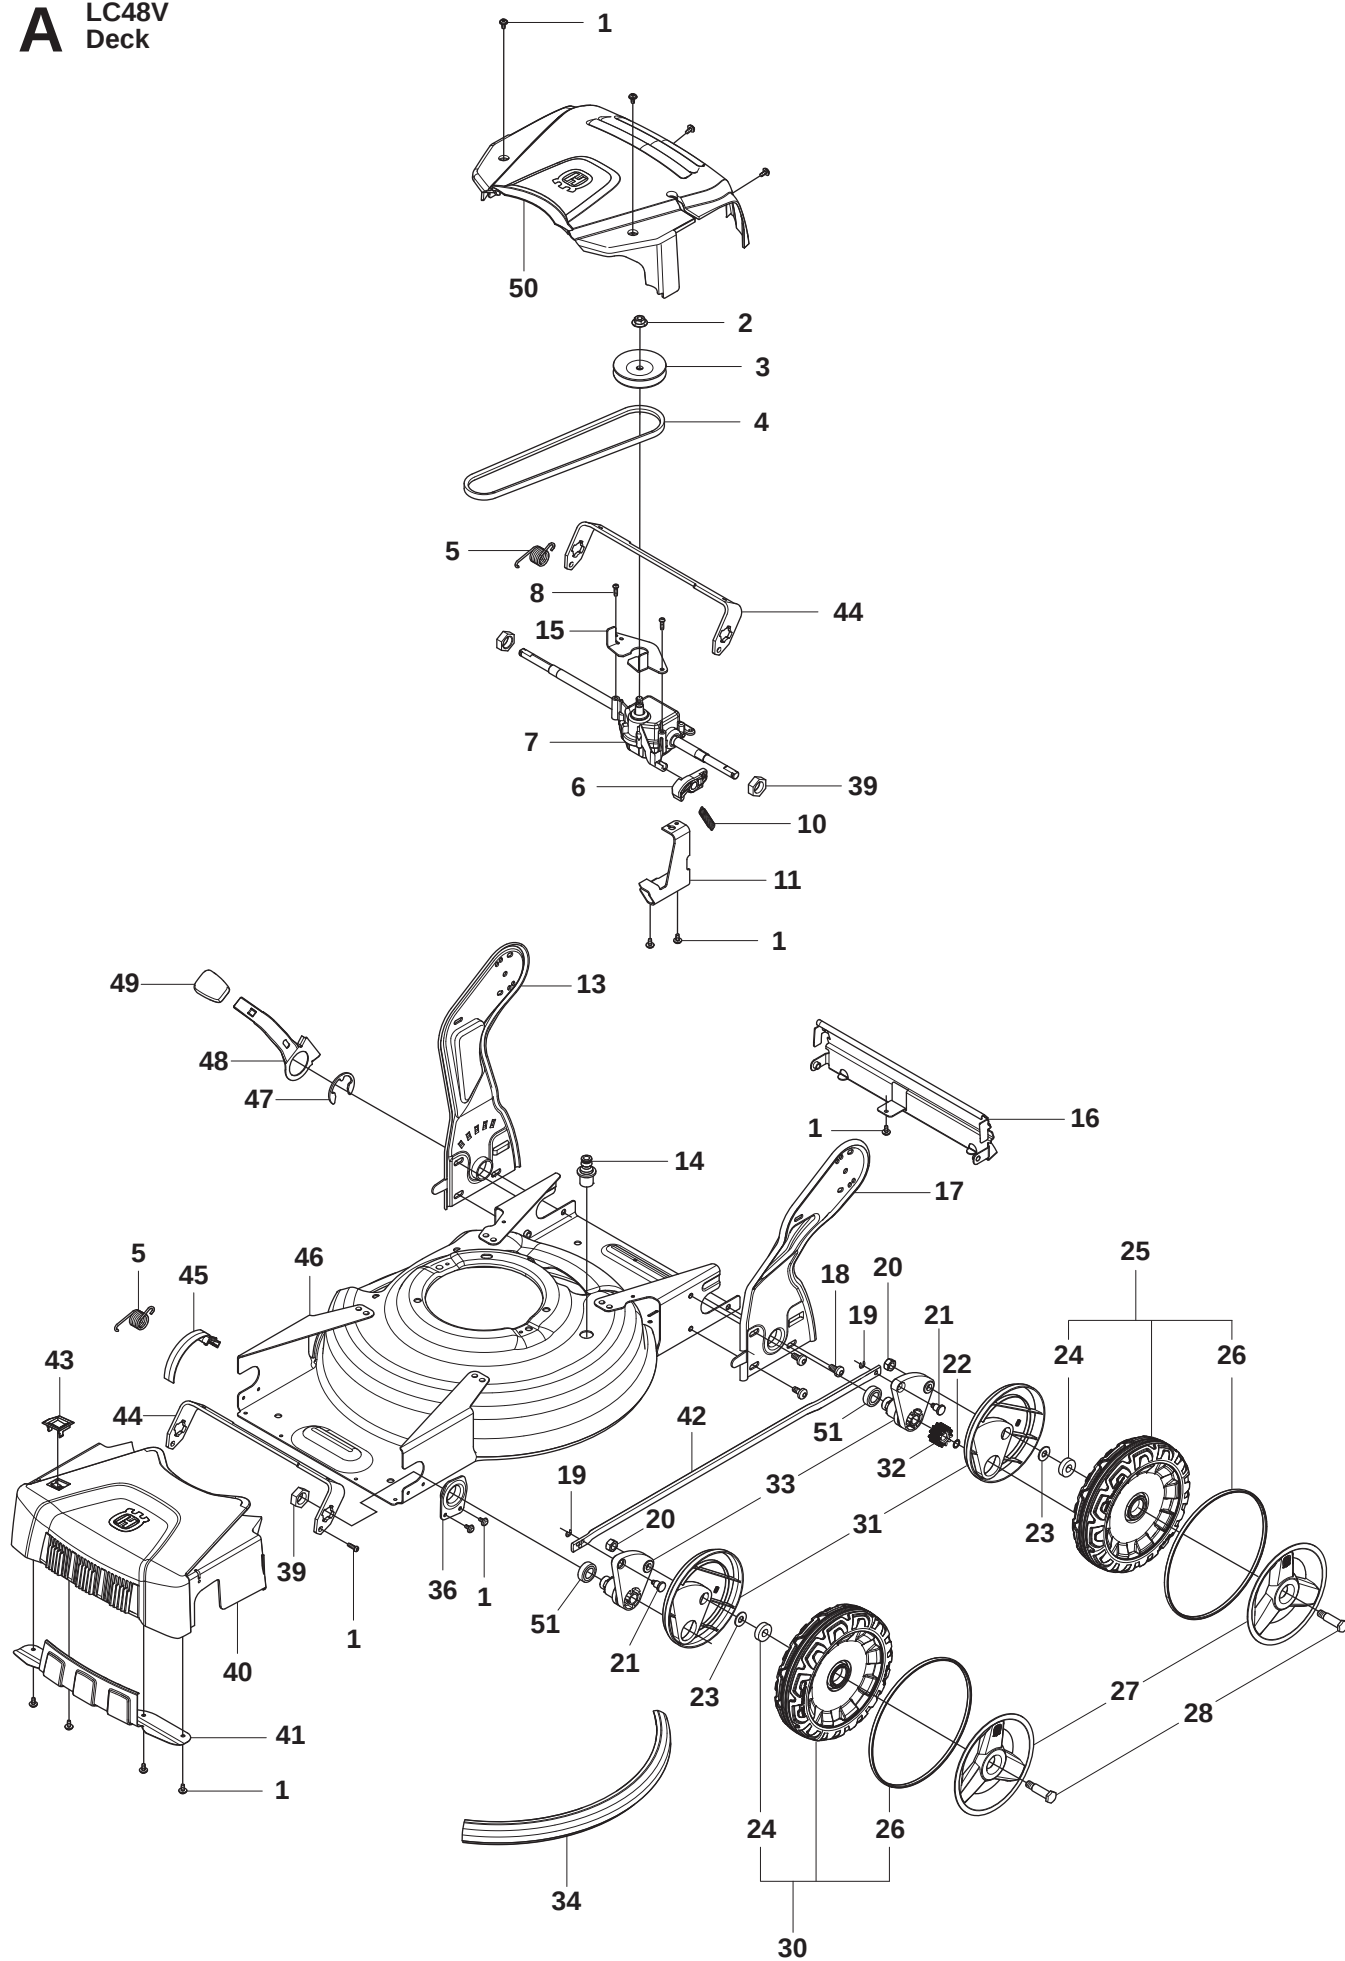


Page A LC48V DECK				
Position	Article	Quantity	Notes	Kit
1	502 43 52-01	17		
2	504 05 56-01	1		
3	504 05 33-01	1		
4	501 98 66-01	1		
5	522 02 46-01	2		
6	504 04 83-01	1		
7	504 04 80-01	1		
8	502 43 53-01	2		
10	504 04 87-01	1		
11	504 04 86-01	1		
13	504 00 00-01	1		
14	531 20 58-48	1		
15	504 04 85-01	1		
16	504 64 15-01	1		
17	504 00 32-01	1		
18	504 64 16-02	6		
19	735 31 09-21	2		
20	731 23 20-01	4		
21	504 62 50-01	2		
22	735 31 36-21	2		
23	505 22 14-01	4		
24	738 21 01-04	8		
25	544 91 69-02	2		
26	544 43 28-01	4		
27	544 44 39-01	4		
28	544 45 34-01	4		
30	502 49 68-01	2		
31	504 62 41-01	4		
32	544 34 23-01	2		
33	504 61 44-01	4		
34	504 69 50-01	1		
36	504 62 49-01	2		
39	505 52 10-01	4		
40	502 62 44-01	1		
41	502 62 54-01	1		
42	504 61 55-01	1		
43	504 62 75-01	1		
44	504 61 46-01	2		
45	504 62 76-01	1		
46	501 37 55-01	1		
47	504 70 28-01	1		
48	504 83 82-01	1		
49	504 83 83-01	1		
50	501 35 50-01	1		
51	738 21 01-14	2		

B LC48V
Handle

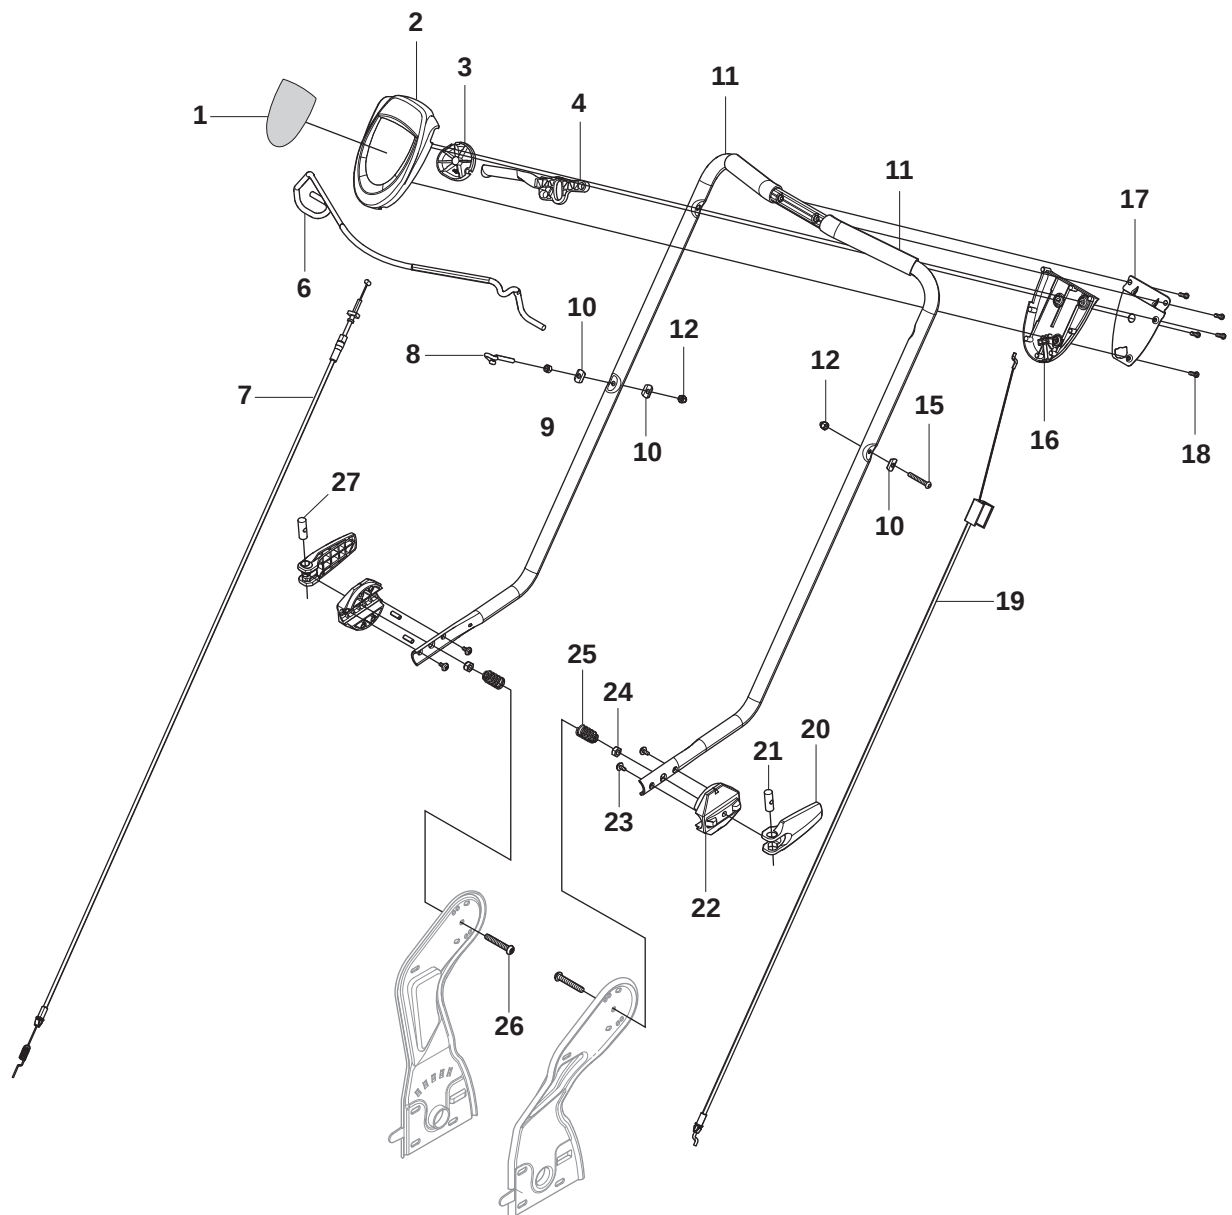


Page B LC48V HANDLE				
Position	Article	Quantity	Notes	Kit
1	544 92 81-01	1		
2	532 18 82-78	1		
3	532 40 62-62	1		
4	532 19 02-83	1		
6	502 28 93-01	1		
7	544 90 79-05	1		
8	531 20 51-69	1		
9	531 20 71-65	1		
10	531 20 49-61	3		
11	522 74 84-01	2		
12	502 30 50-01	2		
15	505 55 77-01	1		
16	532 18 82-79	1		
17	532 18 70-97	1		
18	502 43 53-01	5		
19	522 93 74-01	1		
20	504 13 83-01	2		
21	505 50 81-01	2		
22	504 13 89-01	2		
23	502 43 52-01	4		
24	732 25 18-71	2		
25	504 63 81-01	2		
26	505 52 46-01	2		
27	505 50 81-01	4		

C LC48V
Engine

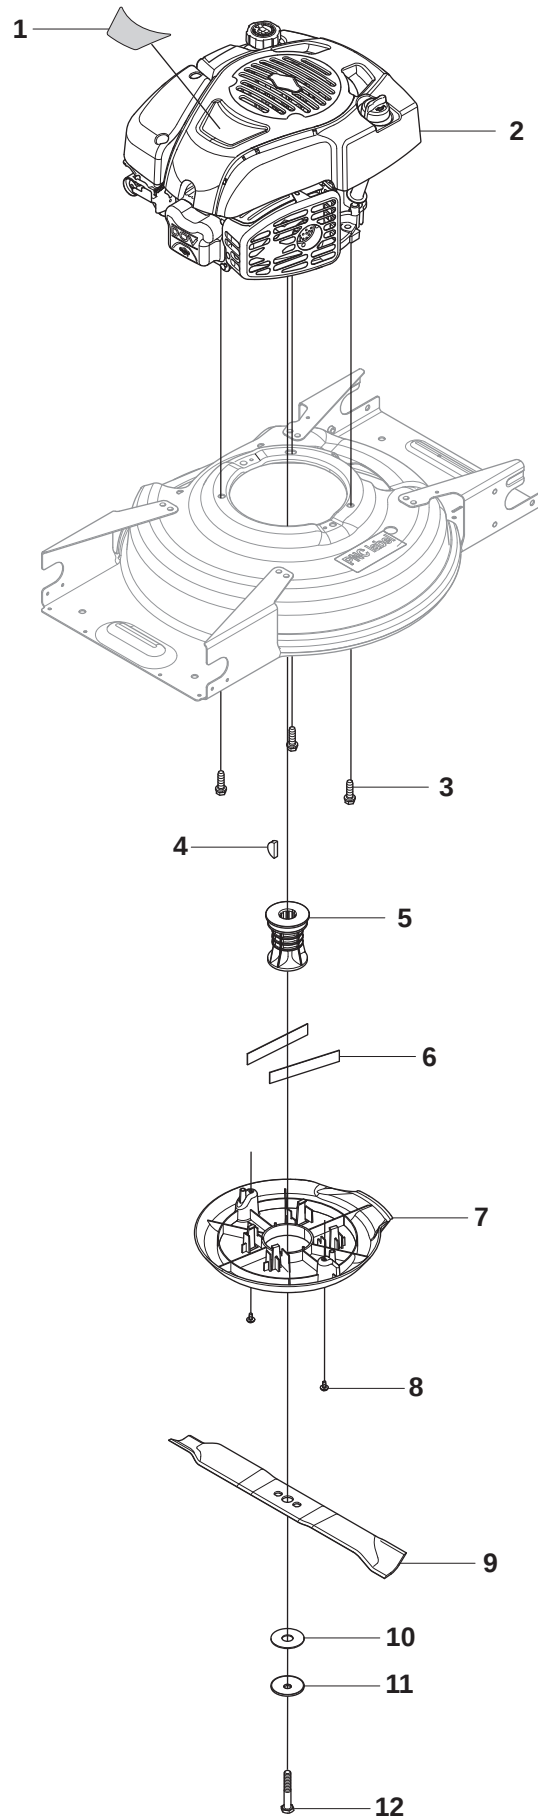

Page C LC48V ENGINE				
Position	Article	Quantity	Notes	Kit
1	521 88 88-01	1		
2	124T02-0204-B1	1	Briggs & Stratton	
3	531 21 28-51	3		
4	531 20 49-07	1		
5	531 20 78-48	1		
6	504 62 42-01	2		
7	501 96 81-01	1		
8	505 52 46-01	2		
9	505 52 41-01	1		
10	531 20 72-43	1		
11	531 20 72-37	1		
12	531 20 66-49	1		
13	510 43 66-01	1		

D LC48V
Collect parts

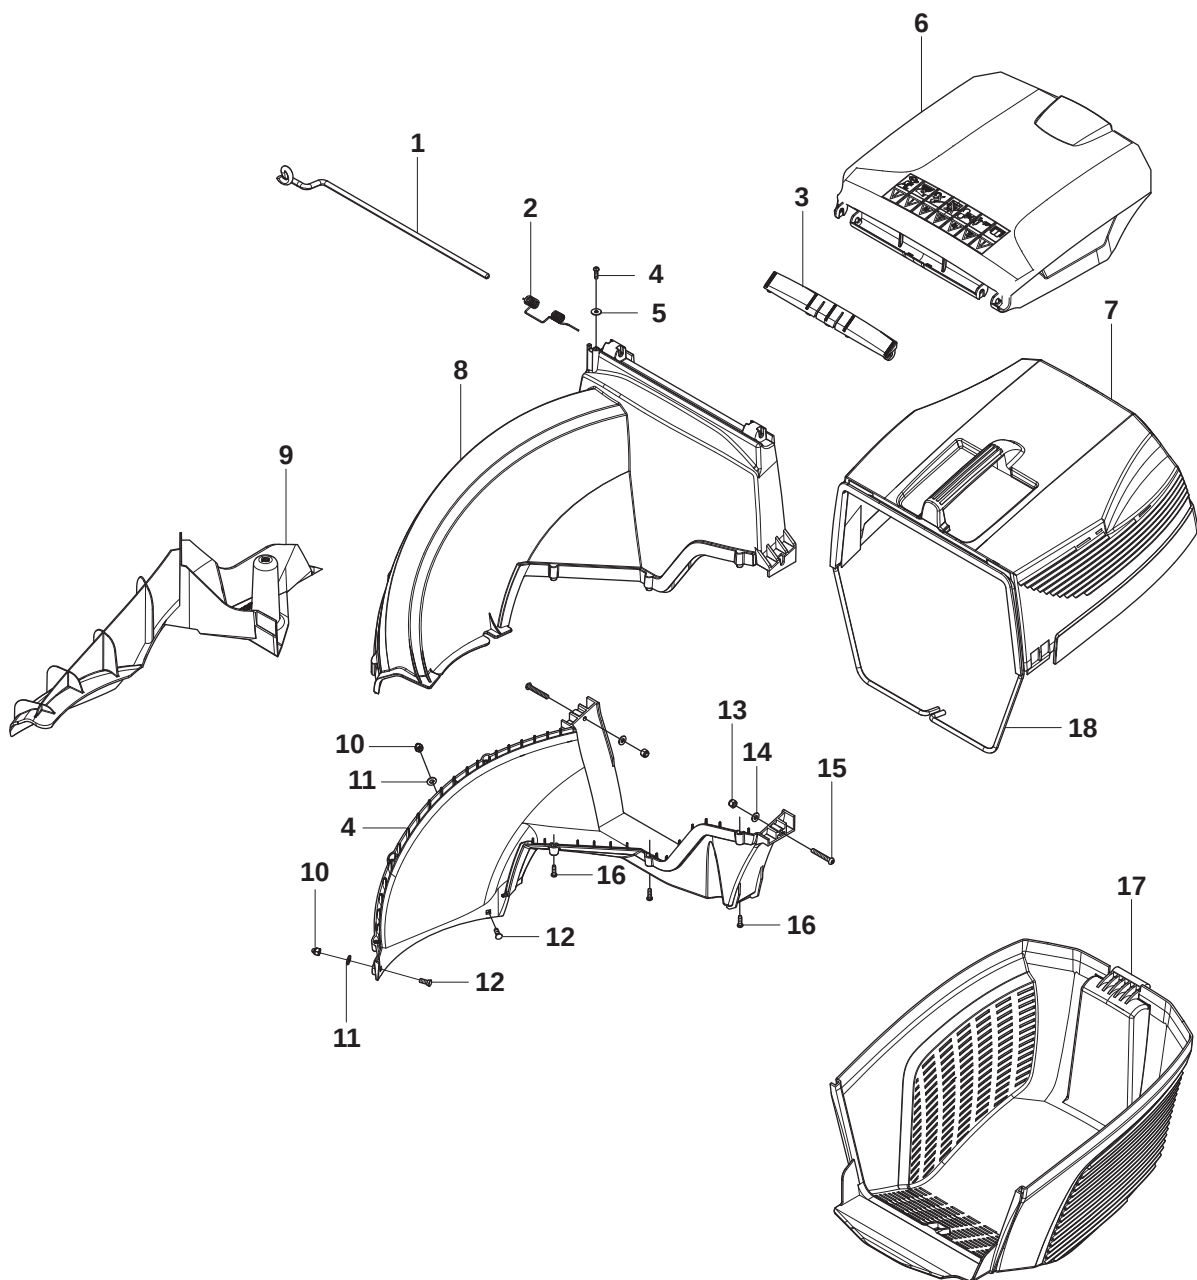

Page D LC48V COLLECT PARTS				
Position	Article	Quantity	Notes	Kit
1	502 24 59-01	1		
2	502 24 47-01	1		
3	504 59 81-01	1		
4	501 96 73-01	1		
5	505 19 84-01	1		
6	501 96 77-01	1		
7	501 98 77-01	1		
8	501 96 75-01	1		
9	504 13 71-01	1		
10	502 30 50-01	2		
11	505 19 84-01	2		
12	505 15 61-01	2		
13	531 20 84-01	2		
14	531 20 66-66	2		
15	505 55 77-01	2		
16	502 43 53-01	7		
17	501 98 76-01	1		
18	502 44 71-01	1		